


1


Marking suspension points

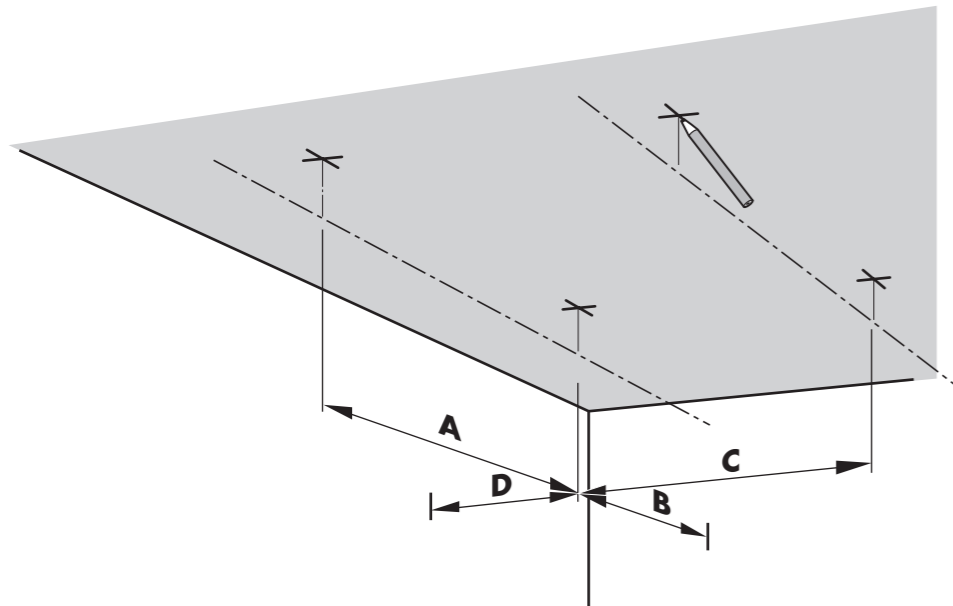

Type	Carrier span		Panel span	
	A	B	C	D
Cell T15	1200	300	600/1200	300
Unigrid	1200	300	600/1200	300



2

Installing the carriers

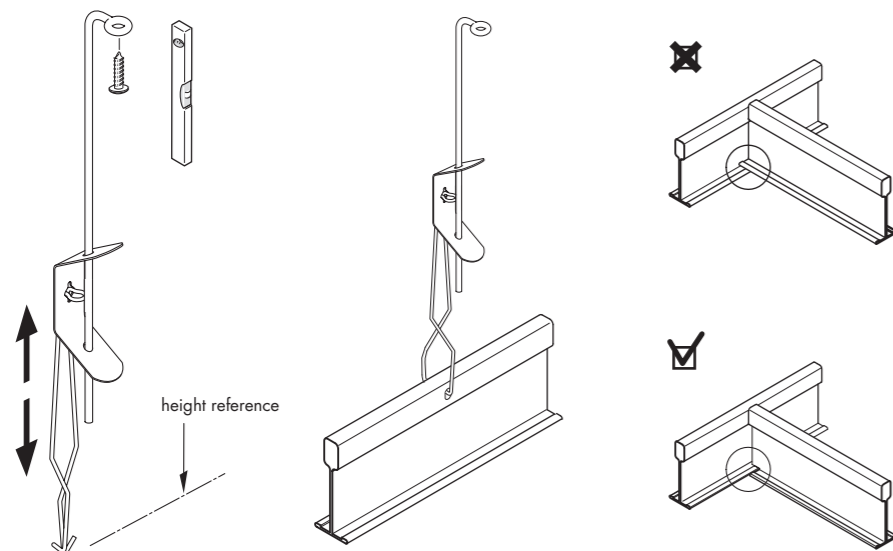


3




Installing the tiles

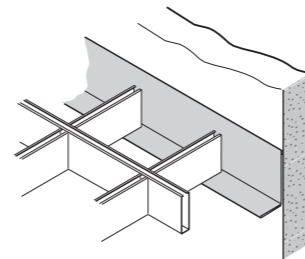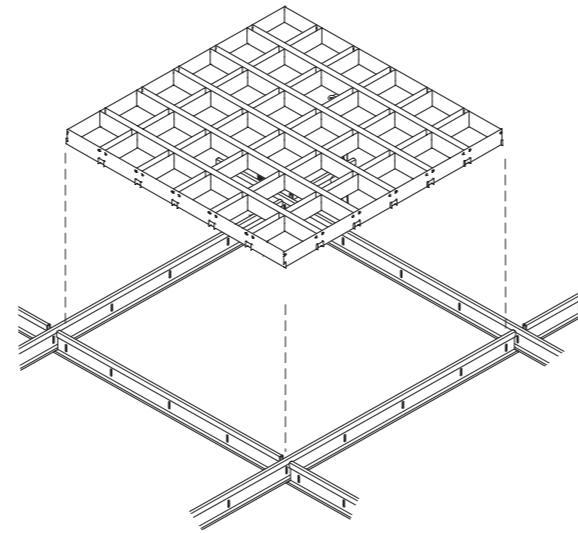

T15

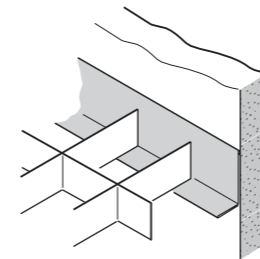

Unigrid

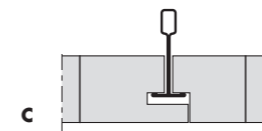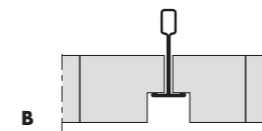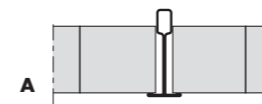

T15

Unigrid

ATTENTION!

To avoid fingerprints and damages, always wear (white) cotton **gloves** when handling the panels.
 Make sure that:
 - Cut-outs in the panels for spots and other installations are made before installing the panels.